


Connect to T1, T2 and T3 terminals of the Contactor

Set Current rating



NC contact terminals

Manuel reset button

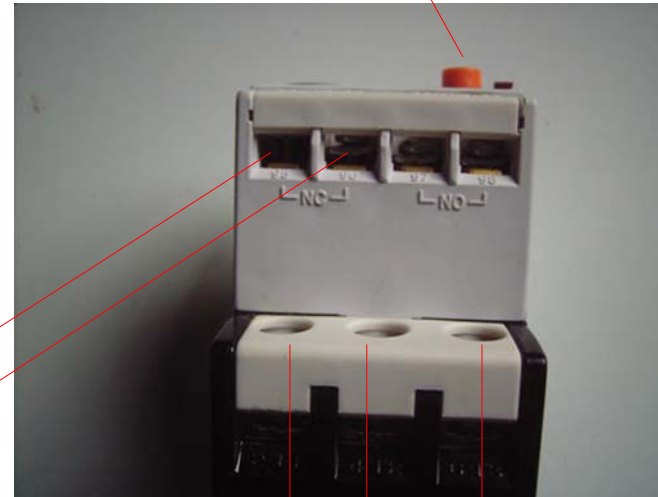

T1, T2 and T3 terminals of the Thermal Overload unit

Thermal Overload details